


100

Fig. 1  
(Prior Art)

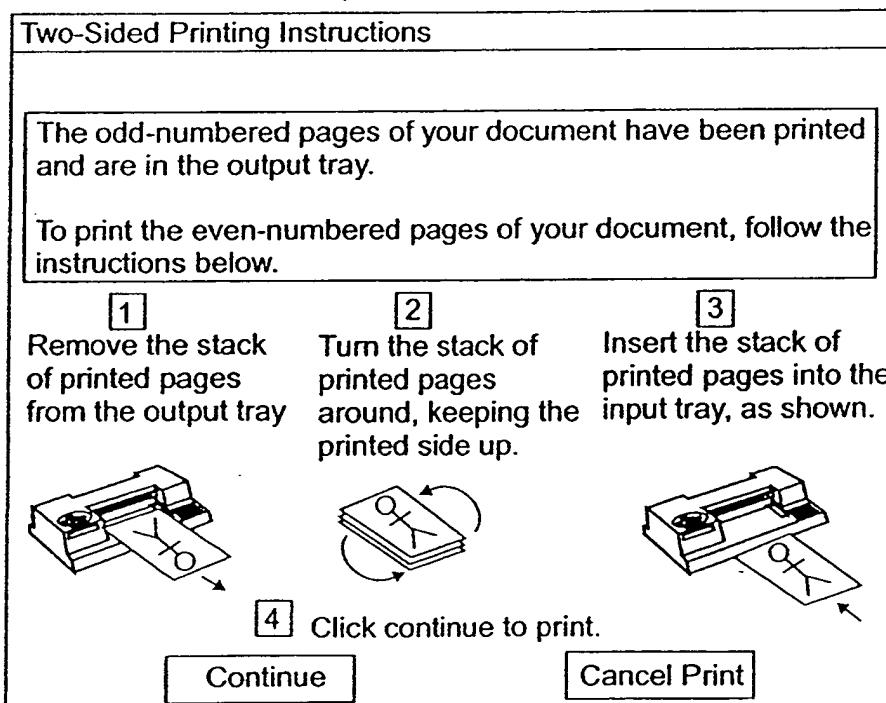

200

Fig. 2  
(Prior Art)

Case No.	Orientation	Binding Type	N - up
1	Portrait	Book	1 - up
2	Portrait	Book	2 - up
3	Portrait	Tablet	1 - up
4	Portrait	Tablet	2 - up
5	Landscape	Book	1 - up
6	Landscape	Book	2 - up
7	Landscape	Tablet	1 - up
8	Landscape	Tablet	2 - up

Fig. 3

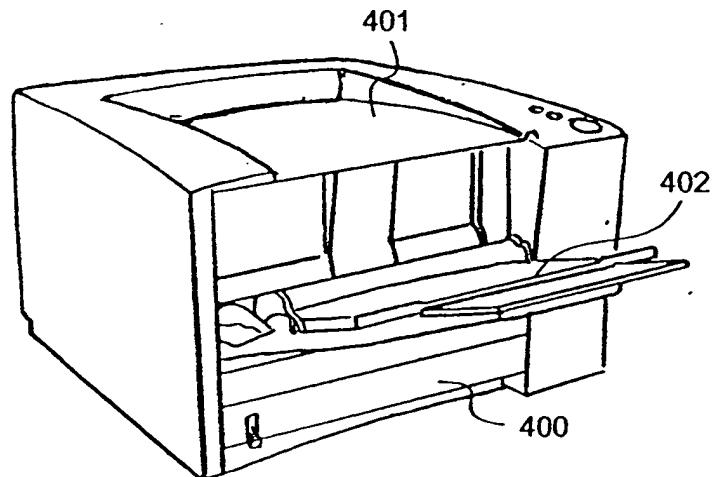


Fig. 4  
(Prior art)

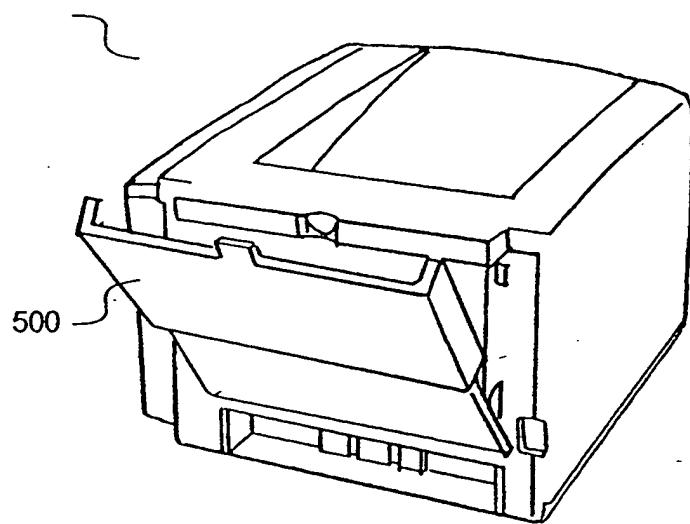


Fig. 5  
(Prior art)

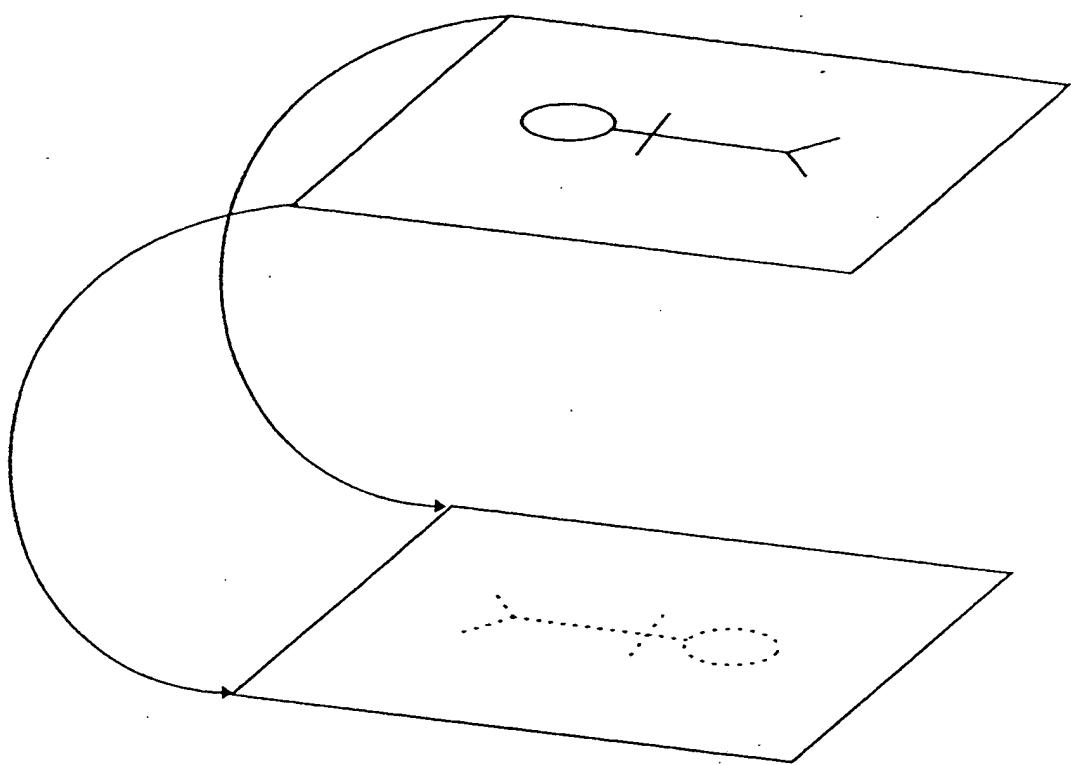


Fig. 6

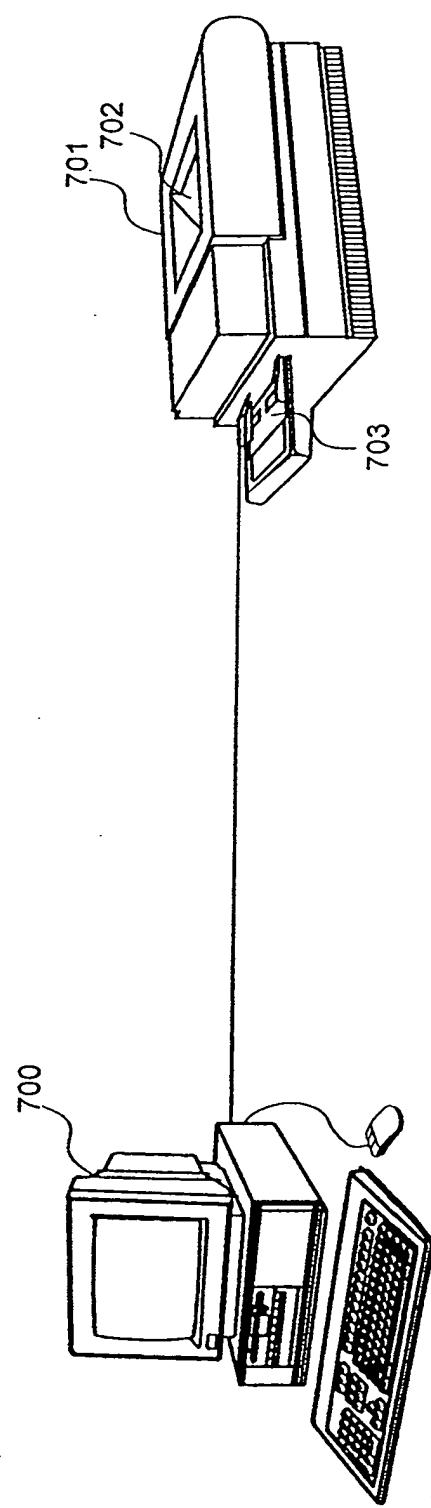


Fig.7

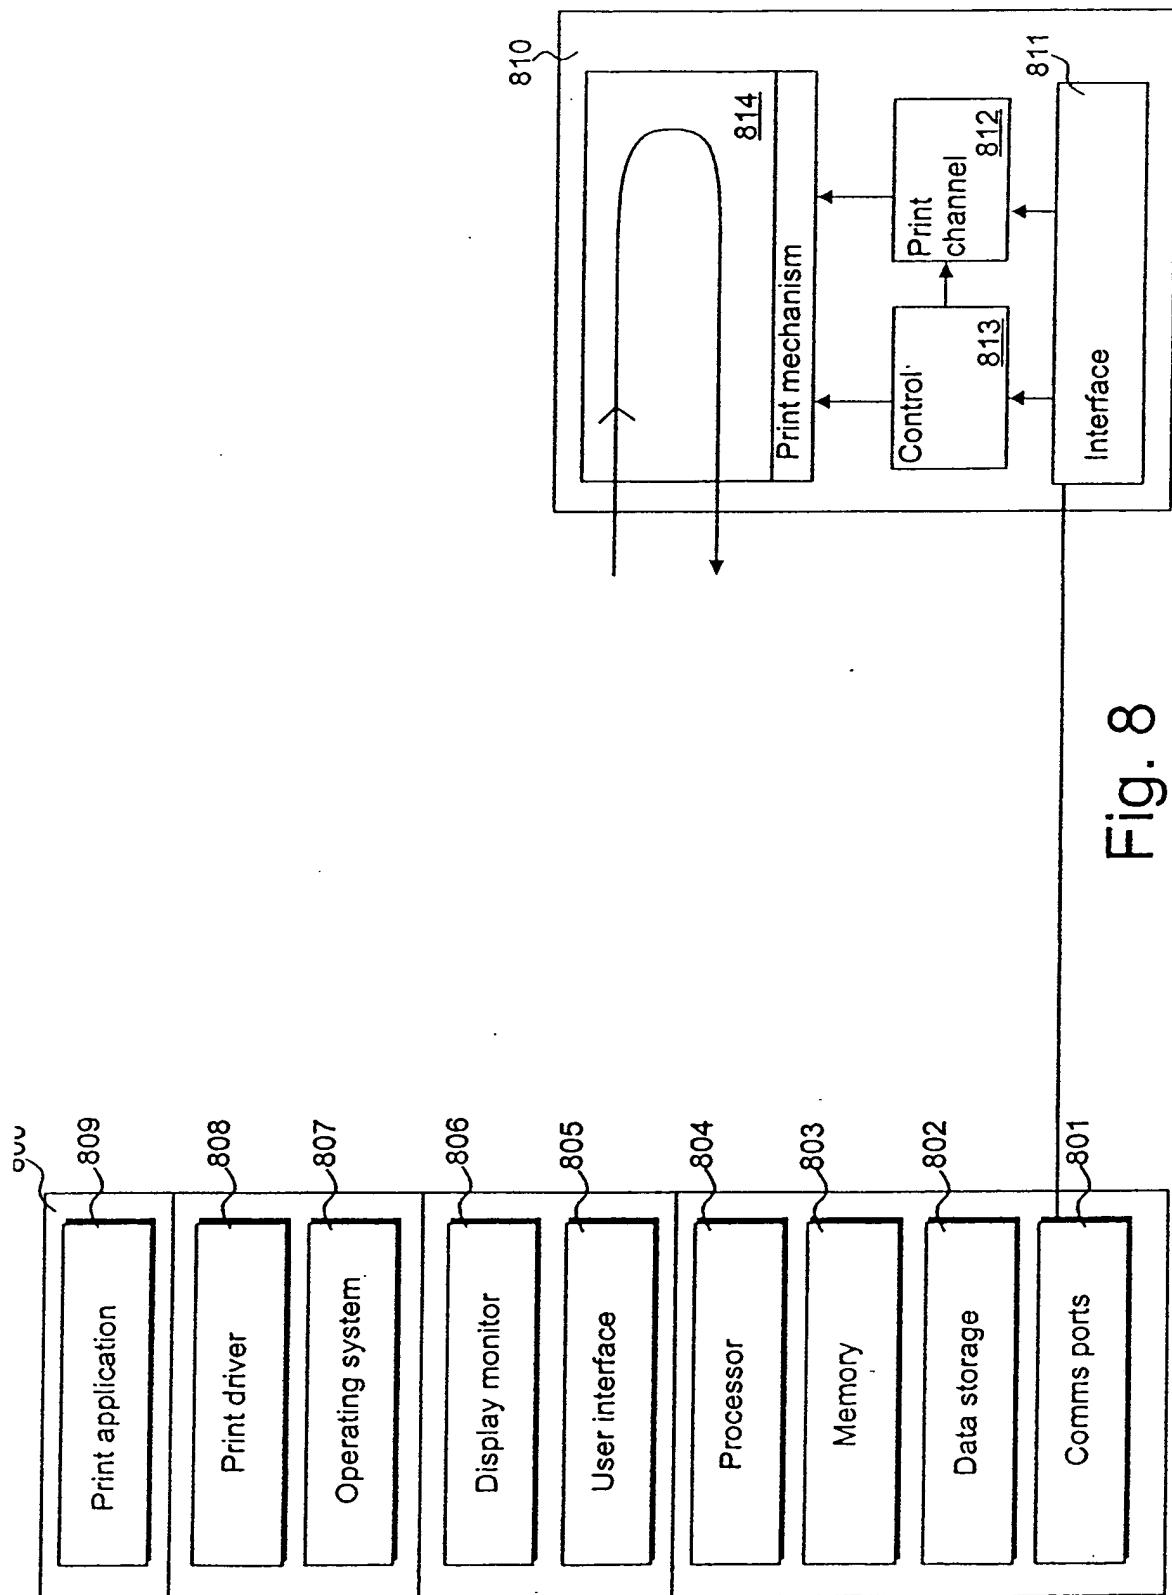


Fig. 8

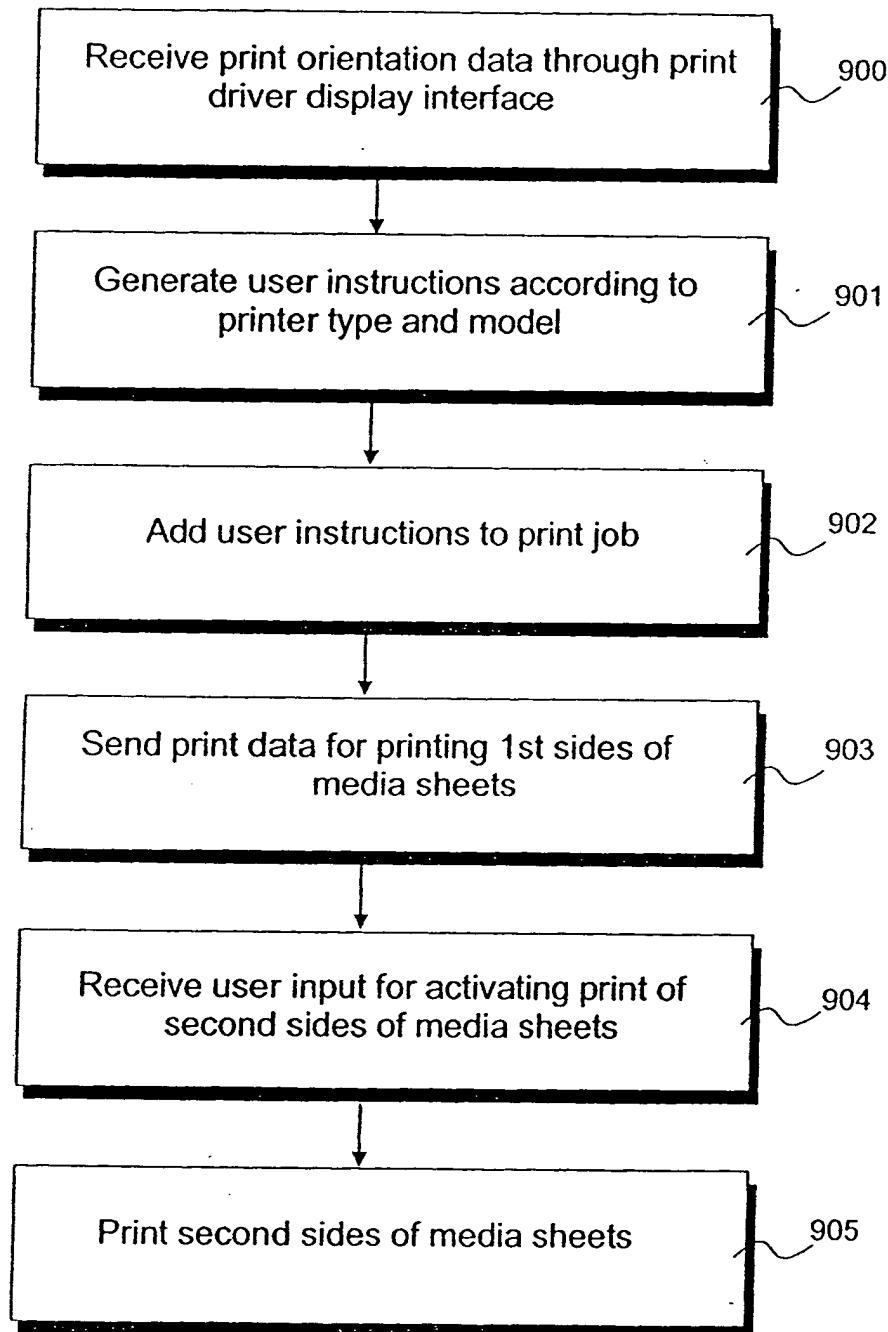


Fig. 9

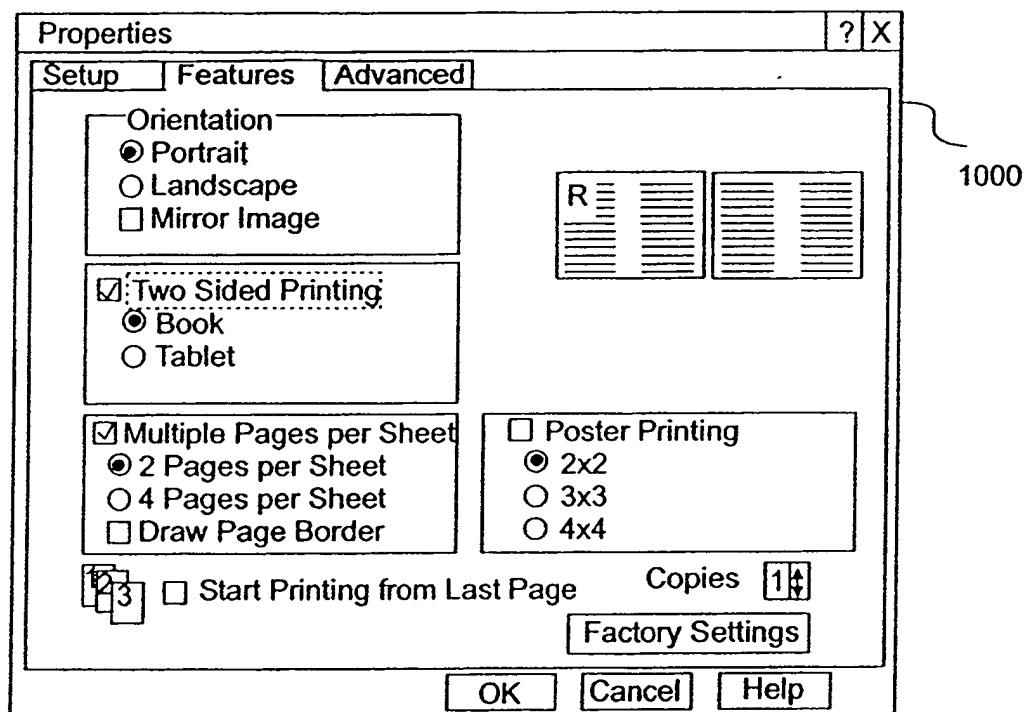


Fig. 10


### Two-Sided Printing Instructions

The odd-numbered pages of your document have been printed and are in the output tray.

To print the even-numbered pages of your document, follow the instructions below.


1

Remove the stack of printed pages from the output tray

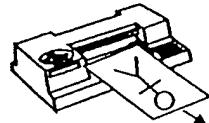

2

Insert the stack of printed pages into the input tray, as shown

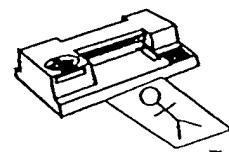

3

Click continue to print.

Continue

Cancel Print

1100

1101

1102

Fig. 11

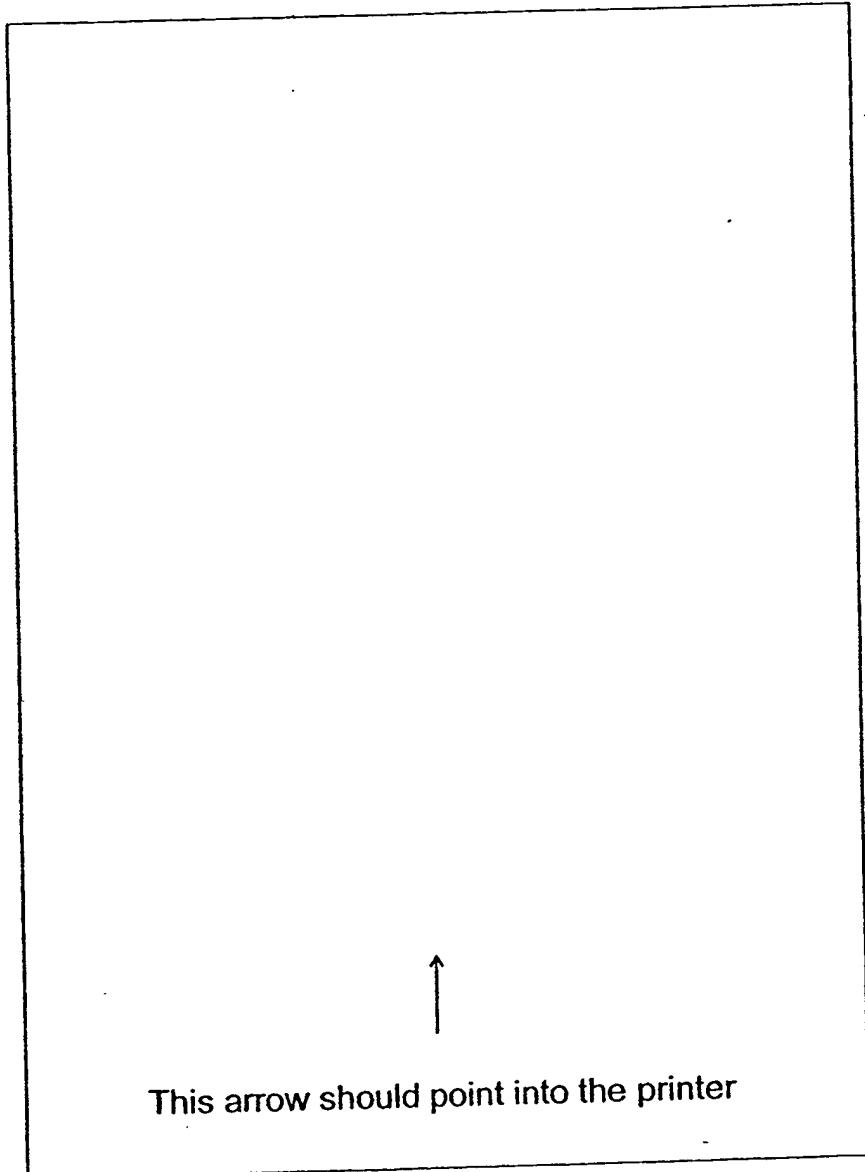


Fig. 12

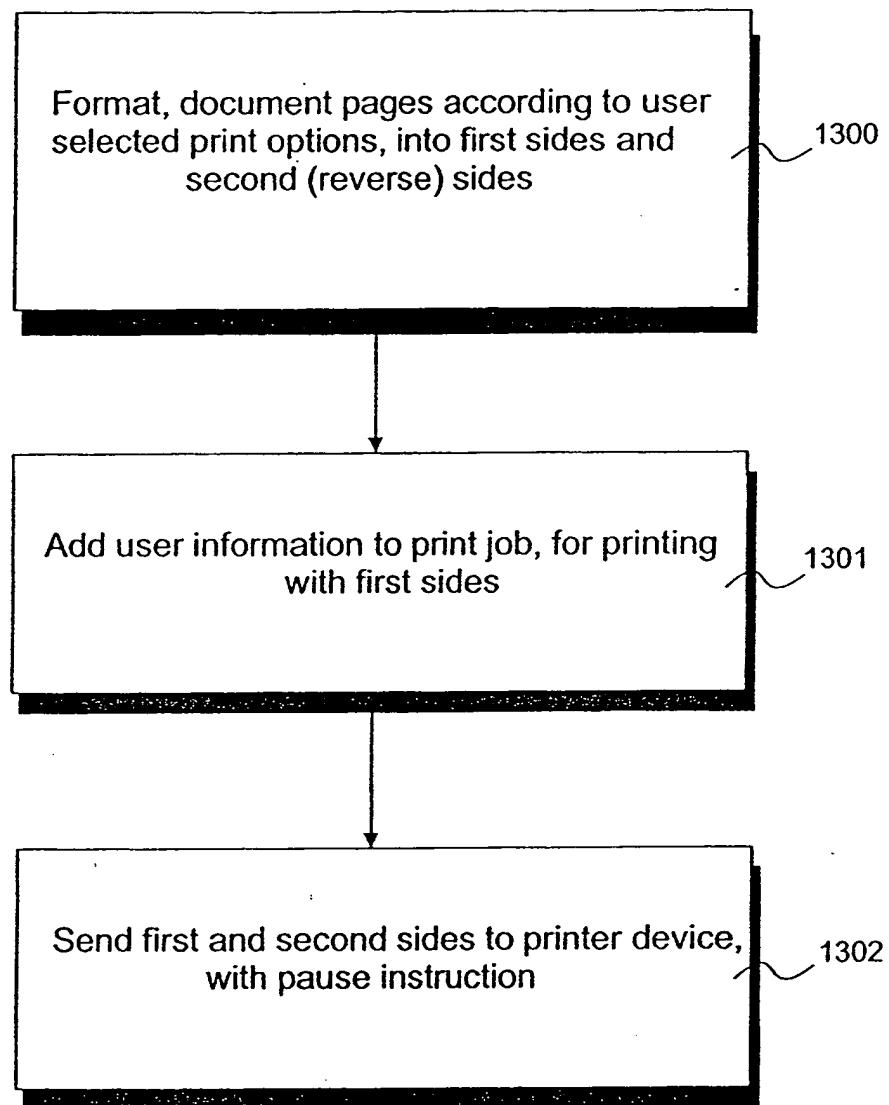


Fig. 13

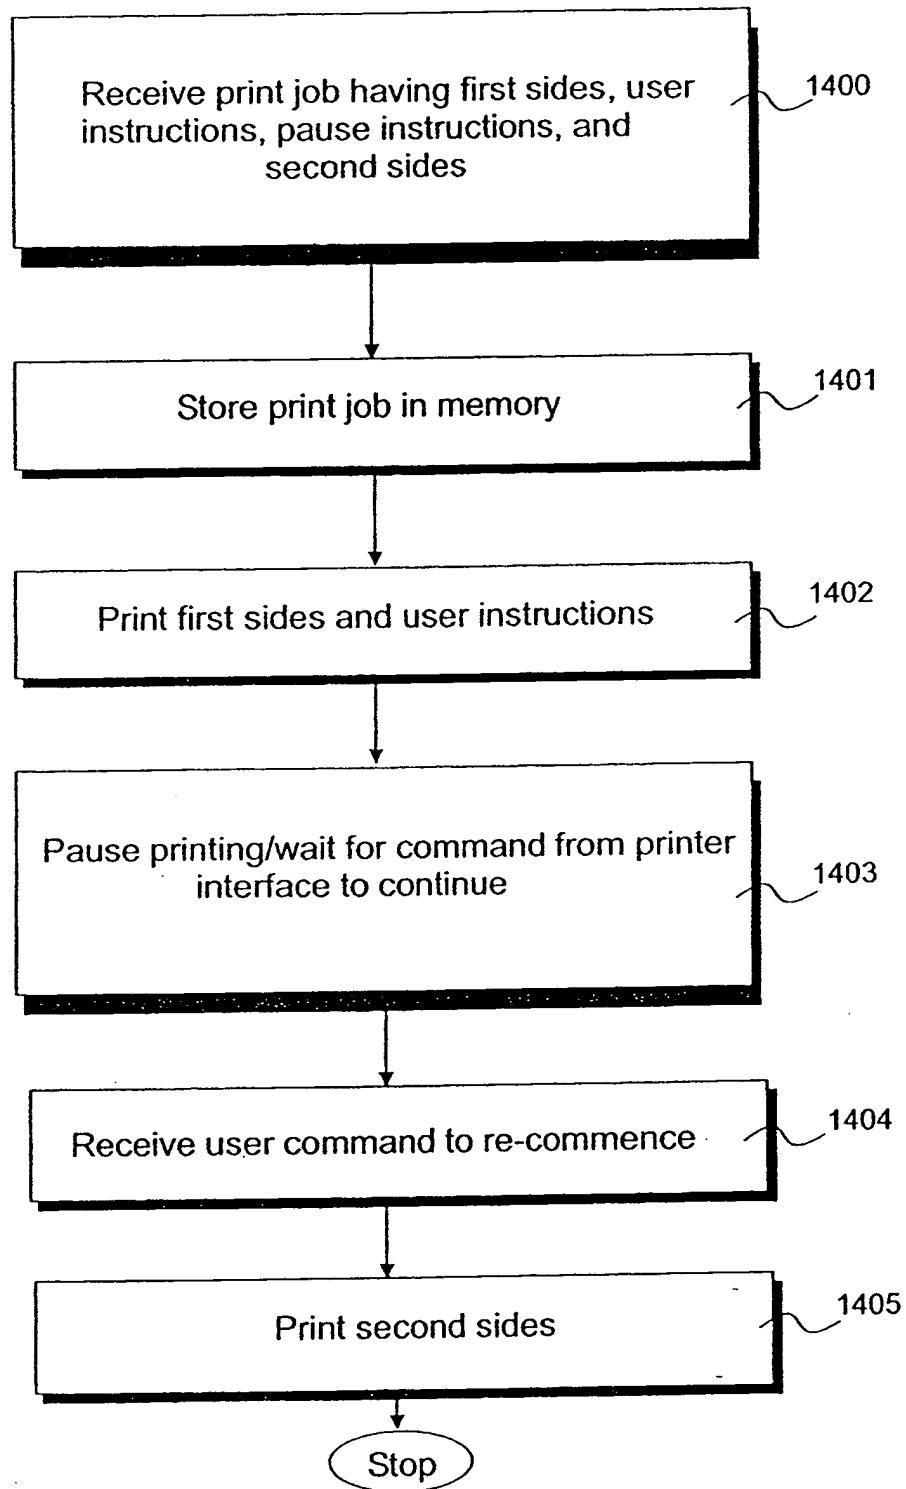


Fig. 14

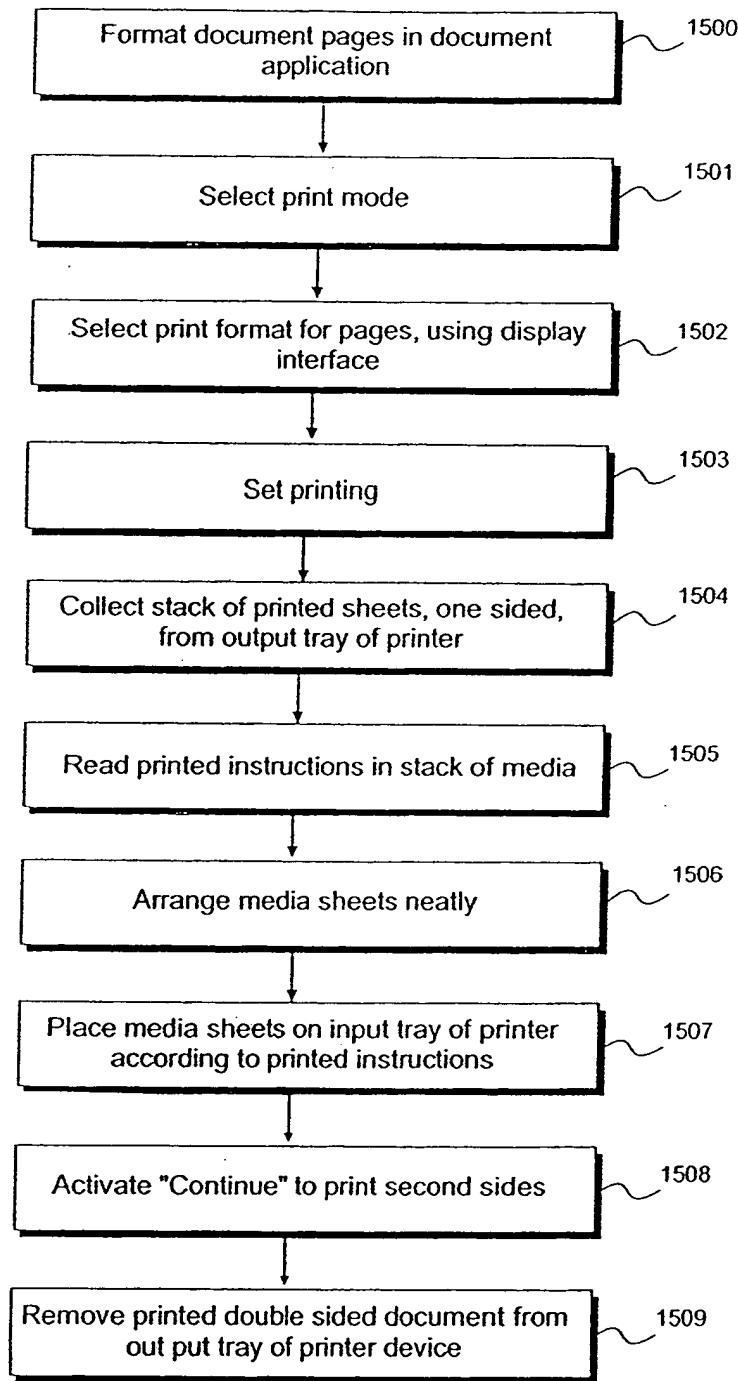


Fig. 15

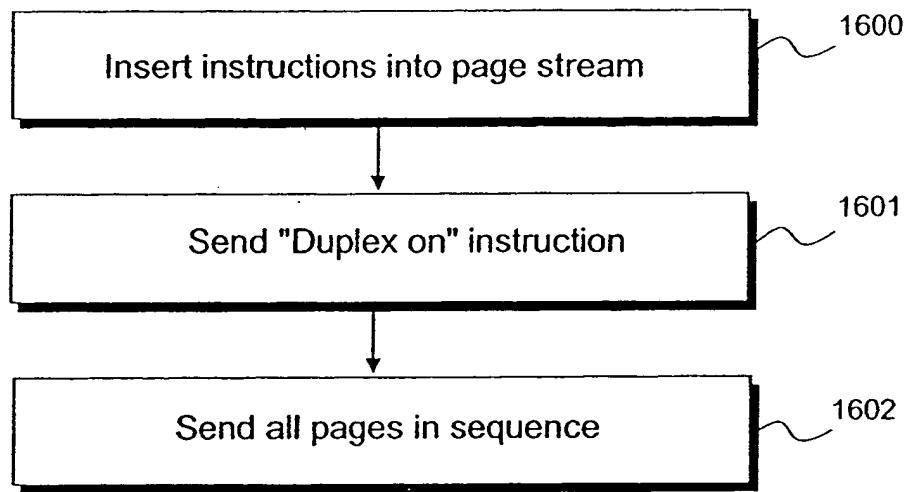


Fig. 16

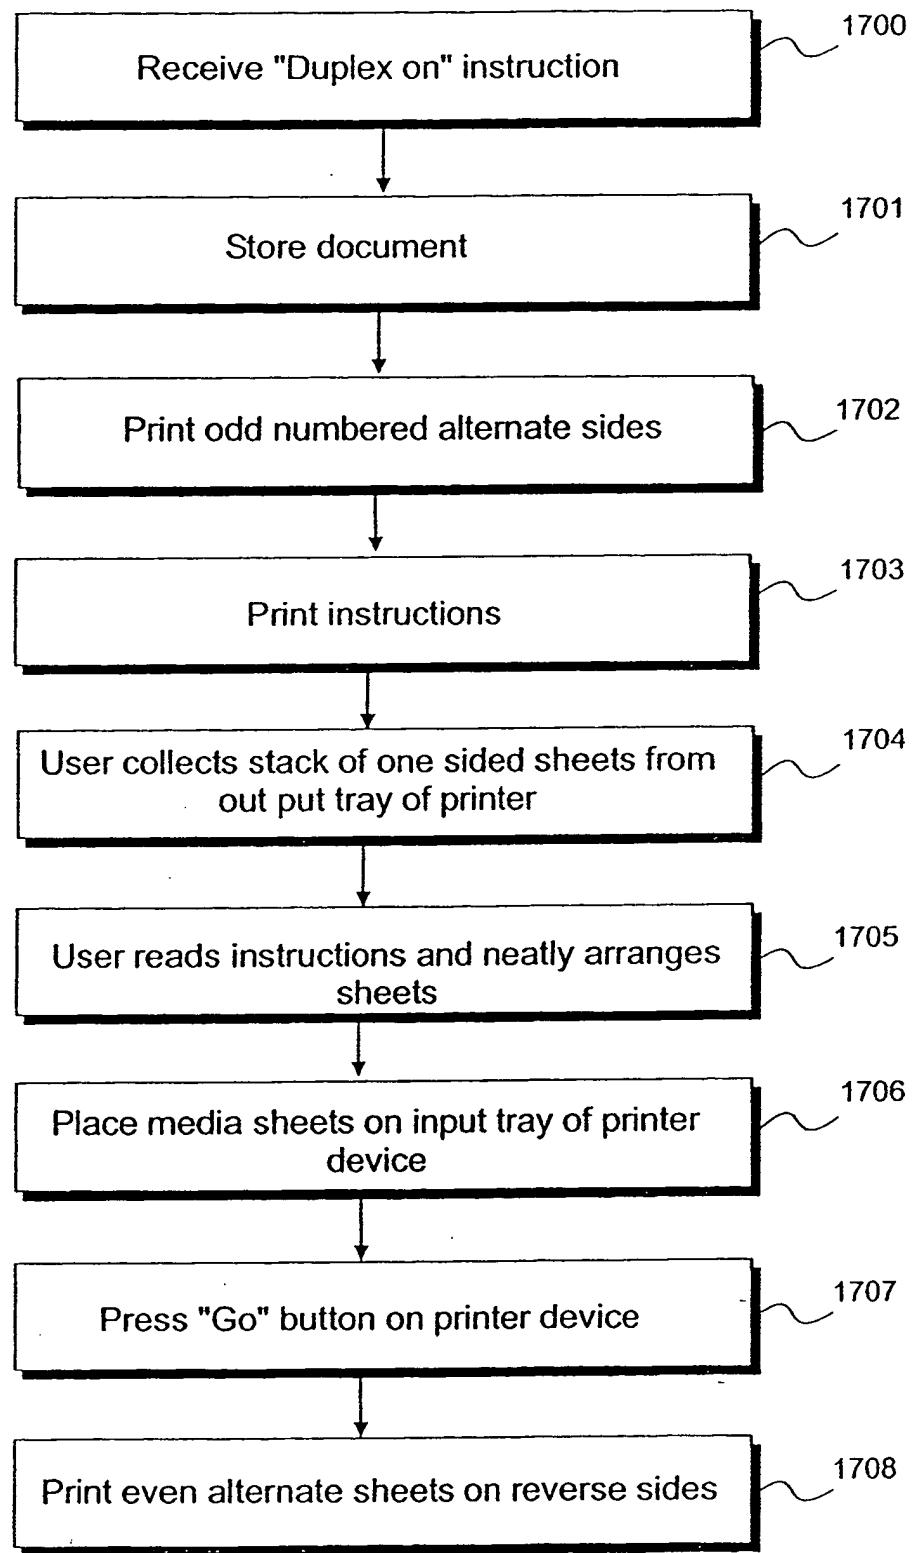


Fig. 17